

PROCEDURES FOR OVERPACKING MEDICAL WASTE INTO STERICYCLE® BOXES

1



- Tape Bottom

2




- Line box with red bag
- Place closed red buckets, needle boxes, and red bags inside

3



- Tie or tape bag and attach the address label to the bag

4

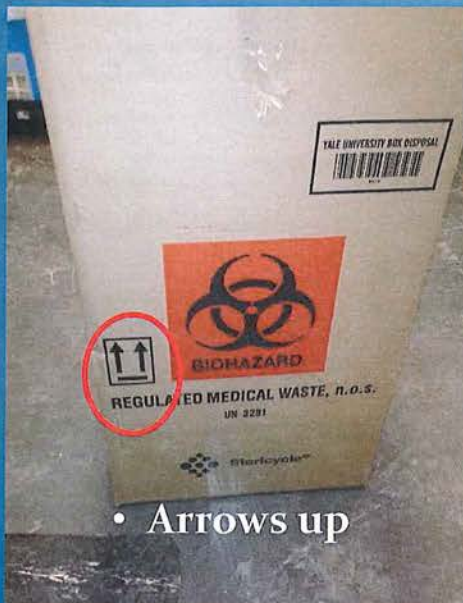

- Arrows up

5



- Seal top with tape
- Attach address label

6



- Attach an incinerate only label if box contains ethidium bromide gels, pathological or preapproved chemically contaminated waste